


Installation Instructions

Suitable for door heights of 1m~2.5m, minimum cabinet depth 400mm-700mm

Door panel width 300mm-600mm, door panel thickness 18~22mm




Single door load-bearing 10-18KG

If you want to install a partition in the middle, please make sure to reserve enough space.

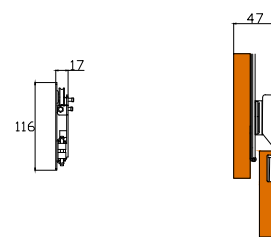

Requirements for doors and cabinets

1. The height of the door should be 8mm shorter than the inner height of the cabinet
2. Drill hinge holes according to the drawing requirements
3. Install 1 set of guide rails for doors 1~1.5m high, and 2 sets for doors above 1.5m

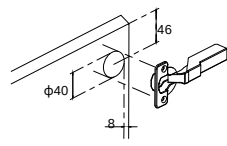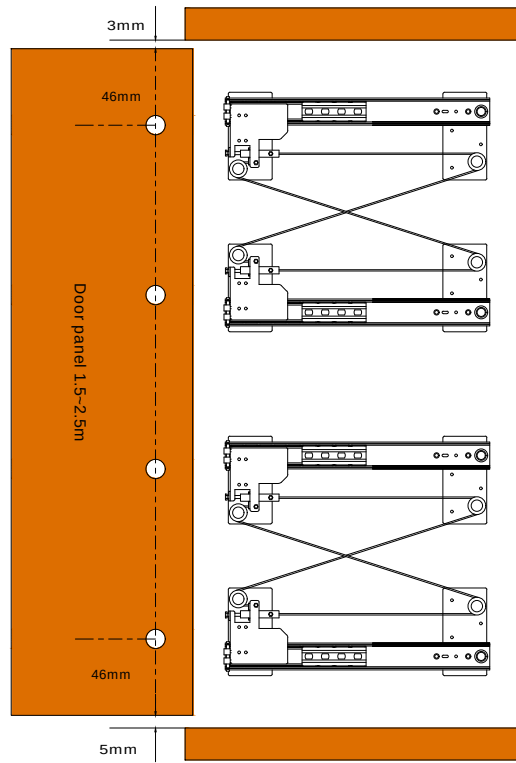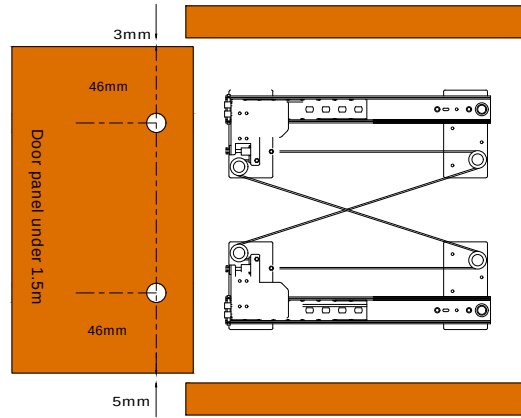


Standard 40mm half cover soft close hinge
(door panel thickness 18mm~22mm)

Installation Guide


(I) Install the slide rail

1. When installing the slide rail, the distance from the edge of the slide rail to the edge of the cabinet is the thickness of the cabinet door panel (for example, if the thickness of the door panel is 25mm, the distance is 25mm)
2. Install the slide rail on the top and bottom of the cabinet. Refer to the first page for the hole distance

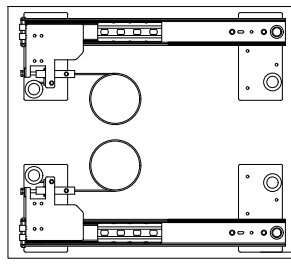


(II) Install the slide rail

1. Install the slide rail according to (I)
2. Pull the steel rope of the slide rail, then pull the steel rope to the roller at the diagonal, bypass the roller, pass the steel rope through the screw hole, and tighten the nut to fix it
3. Adjust the tightness of the steel rope
4. Repeat the above steps for the other side of the slide rail

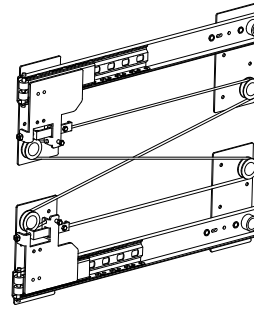


(III) Install hinges

1. Use (M4*5mm) to fix the door and side panels during installation
2. Put the hinge into the hole and fix it with screws
3. The hinge is fixed on the slide rail and door panel
4. Close the door to check the gap. If adjustment is required, please refer to (V)

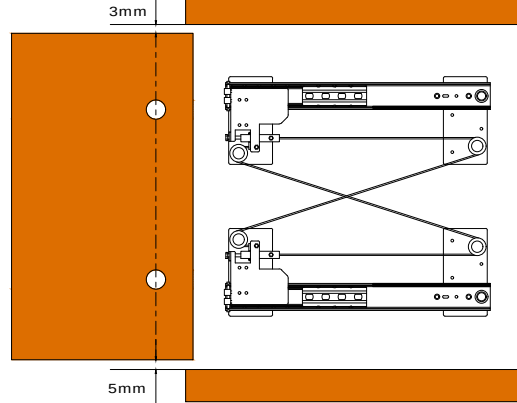



(IV) Adjust hinges

If the door is slightly heavier, you can adjust the screws of the steel rope while ensuring that the weight of the door does not exceed 18kg. The best state of the steel rope is to maintain a slight tension.

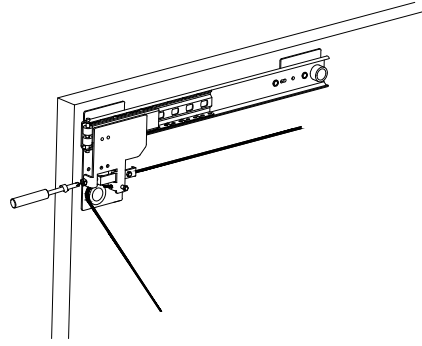


(V) Adjust the hinges

1. Left and right adjustment: -0.5mm/5.5mm
2. Front and rear adjustment: 2.8mm
3. Up and down adjustment: -1.5mm/1.5mm

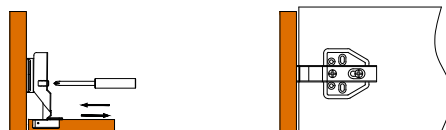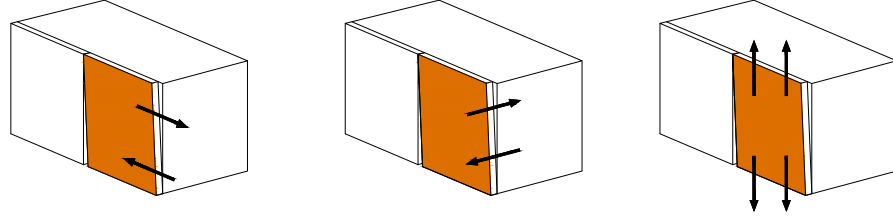

(VI) Install the positioning wheel

1. As shown in the figure, fix the positioning wheel on the bottom and top of the cabinet

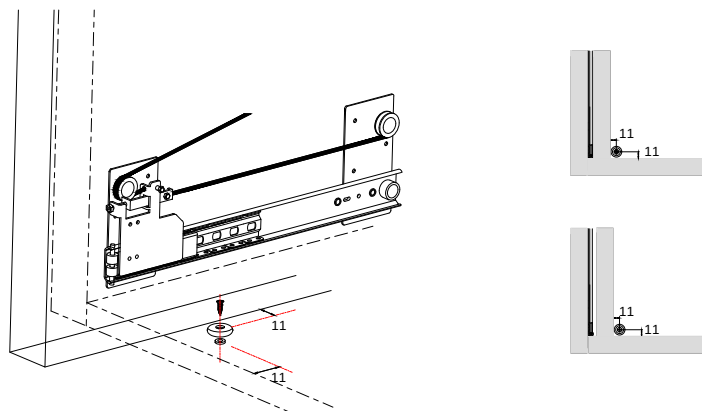

Application Examples

